



120 Filter location with present technology

Power loading across small area causes excessive filter heat loading resulting in transmission losses, spectral shifts and thermal stress cracking problems.

example: fiber bundle entrance

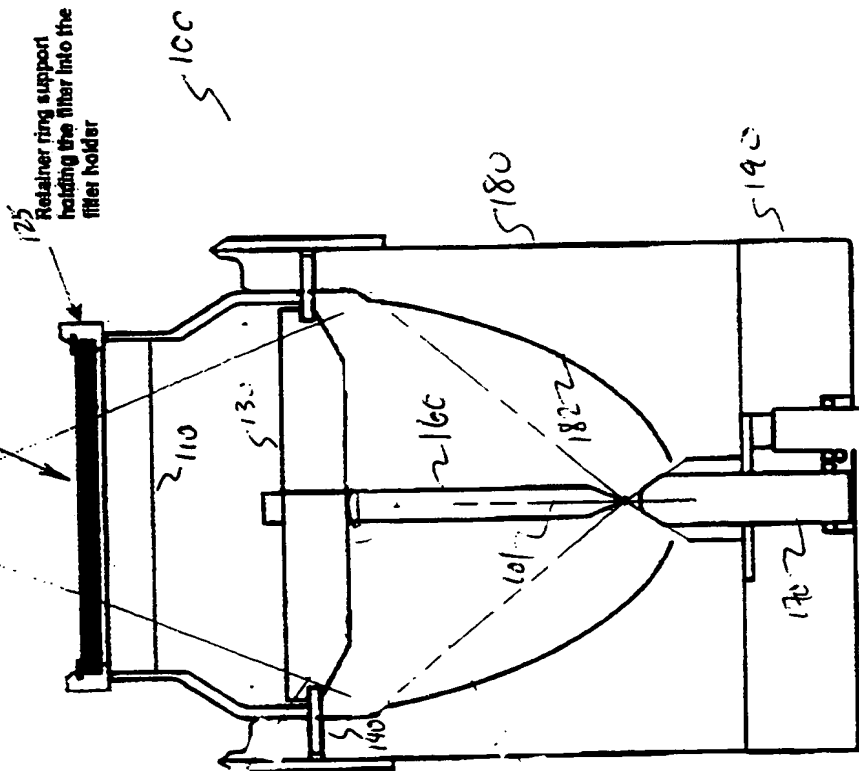


FIGURE 1

-- Prior Art --